



BACKGUARD


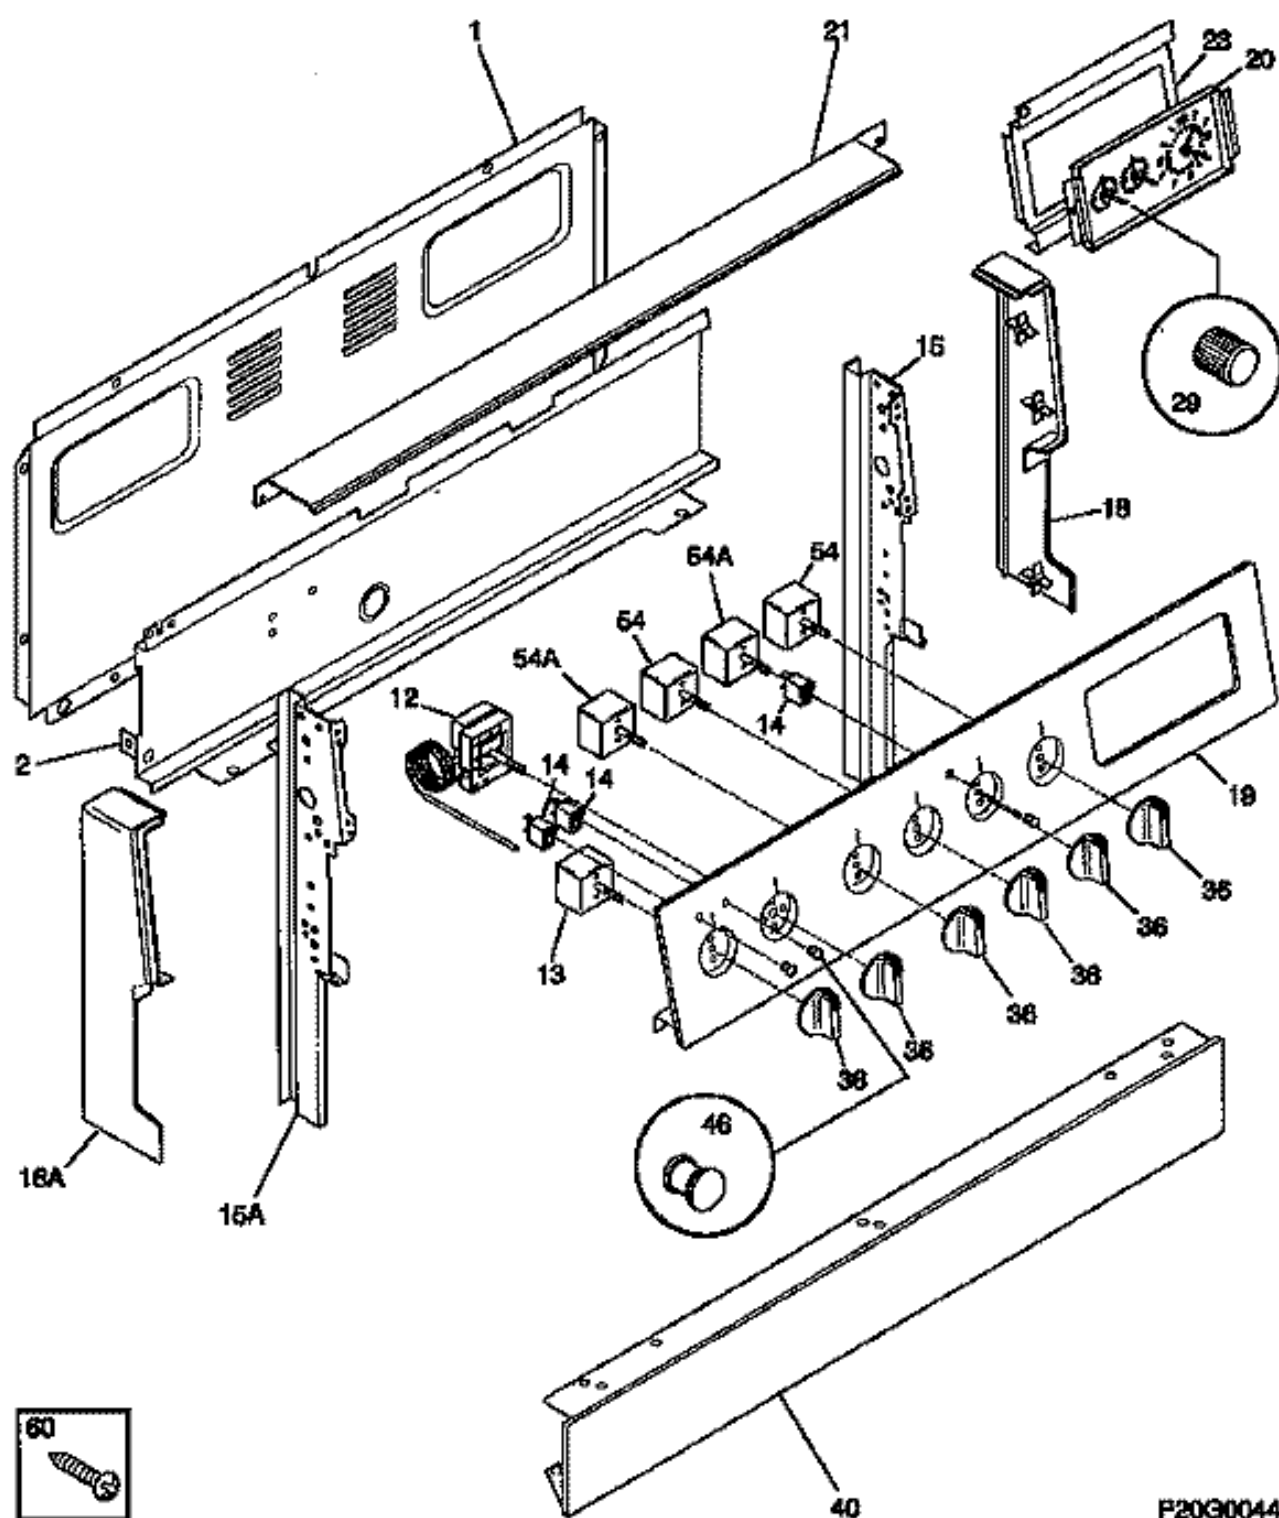


F2090044

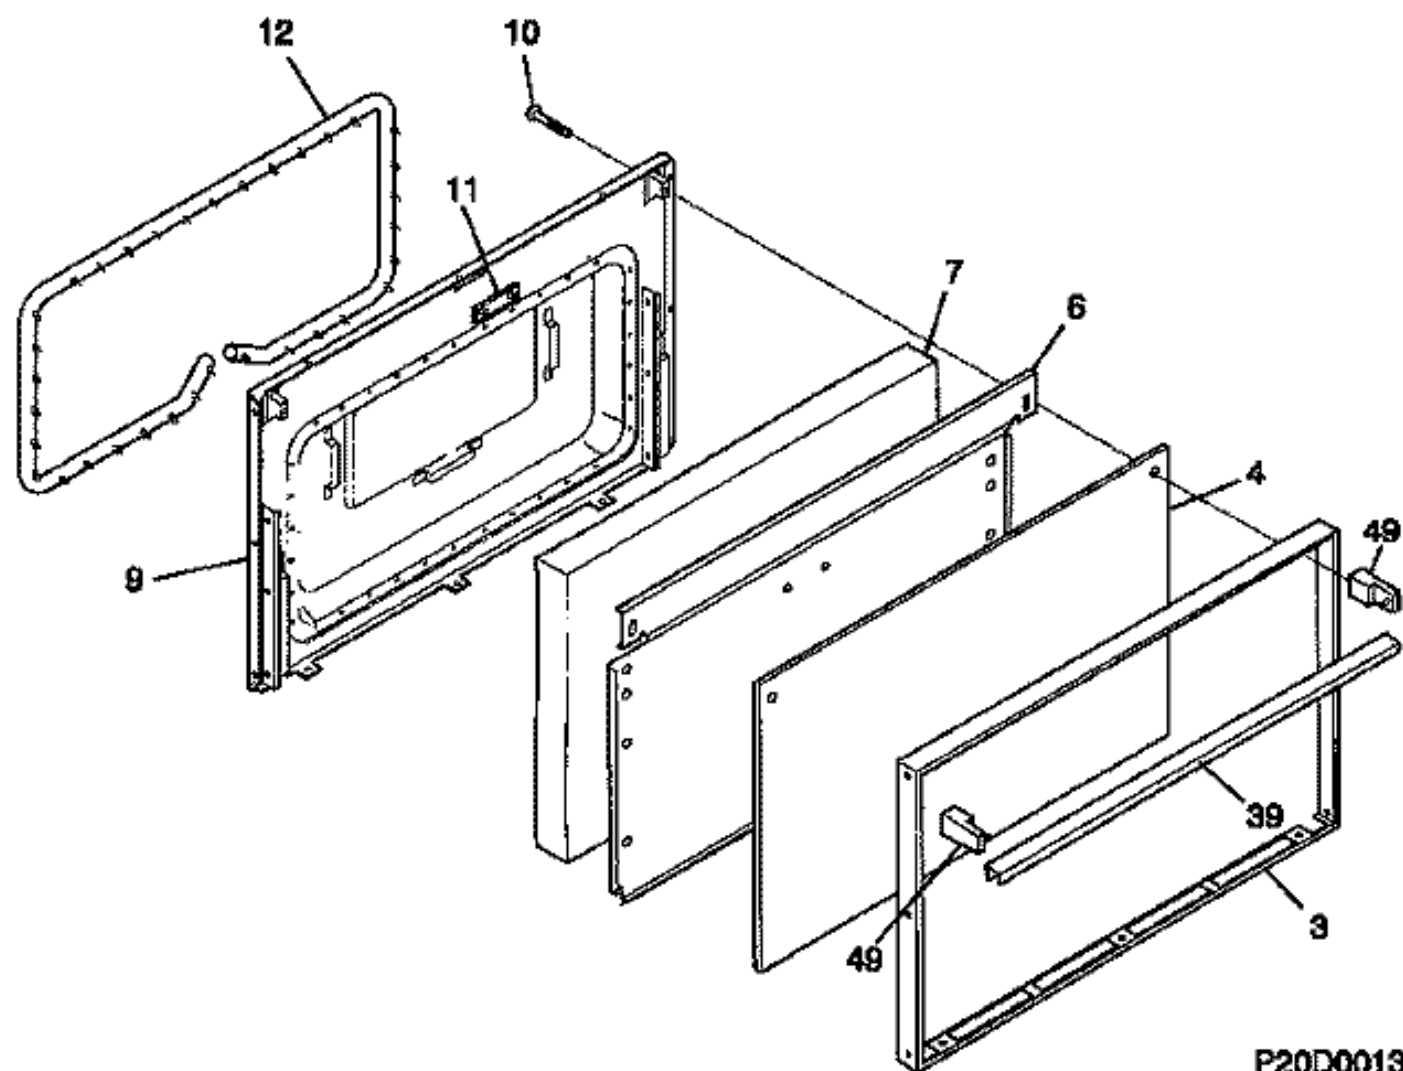


P20D0013

TOP/DRAWER

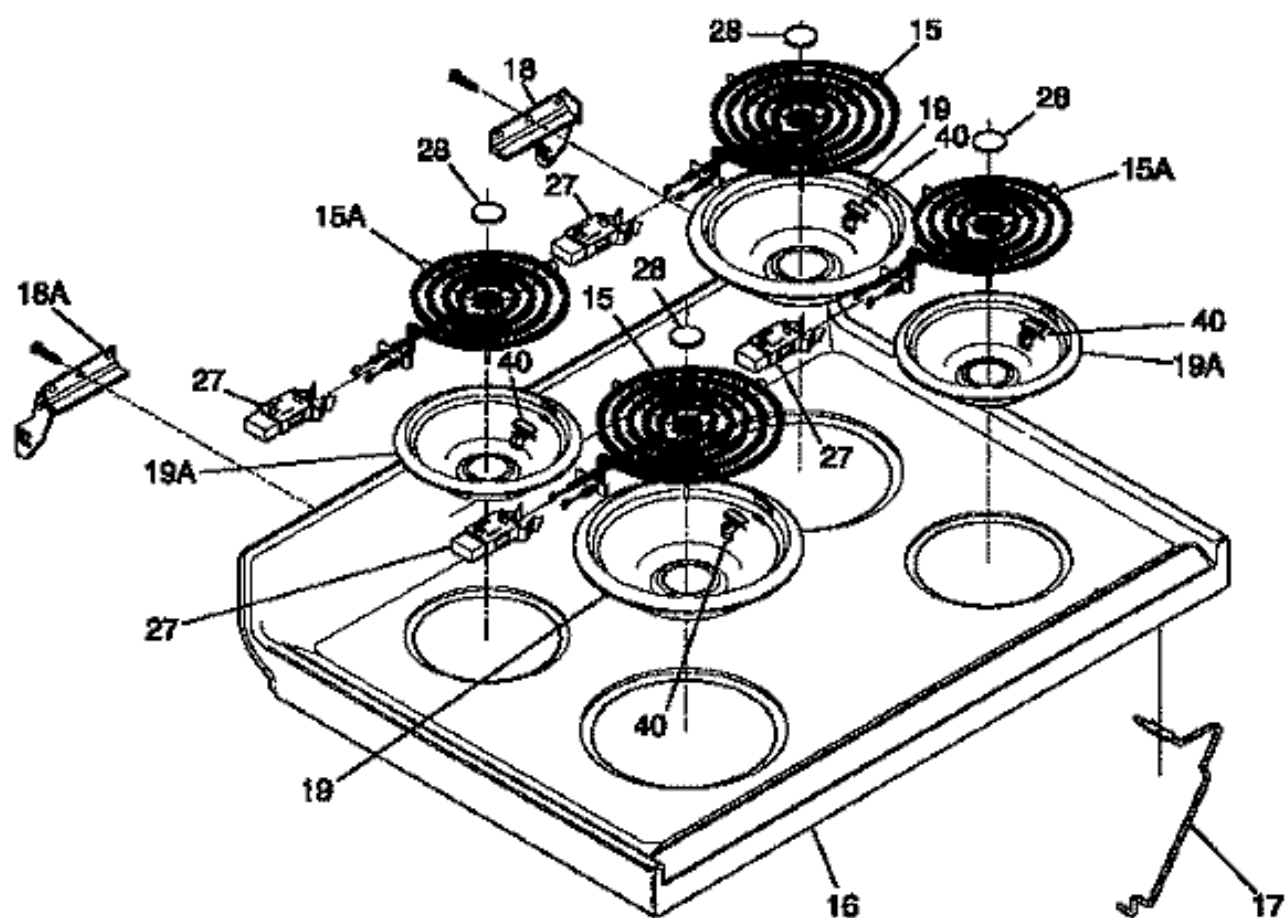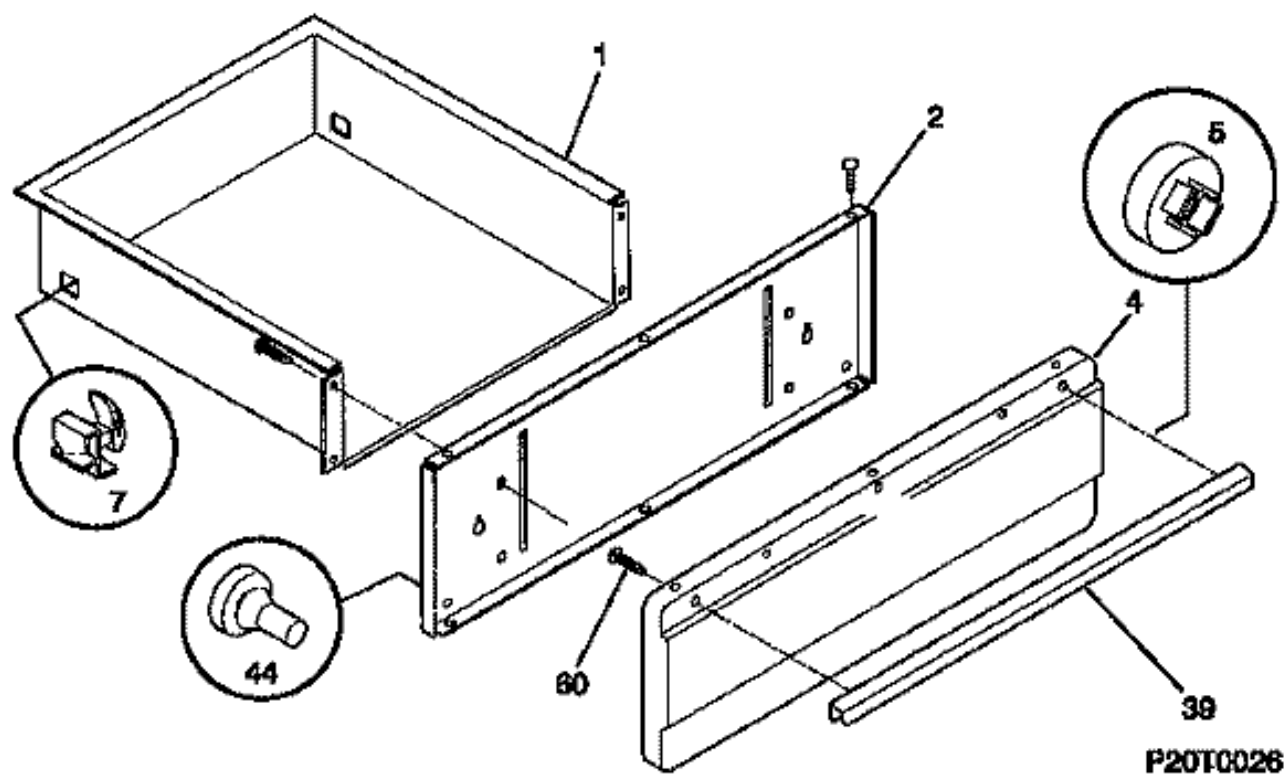

P20TC026

WIRING DIAGRAM

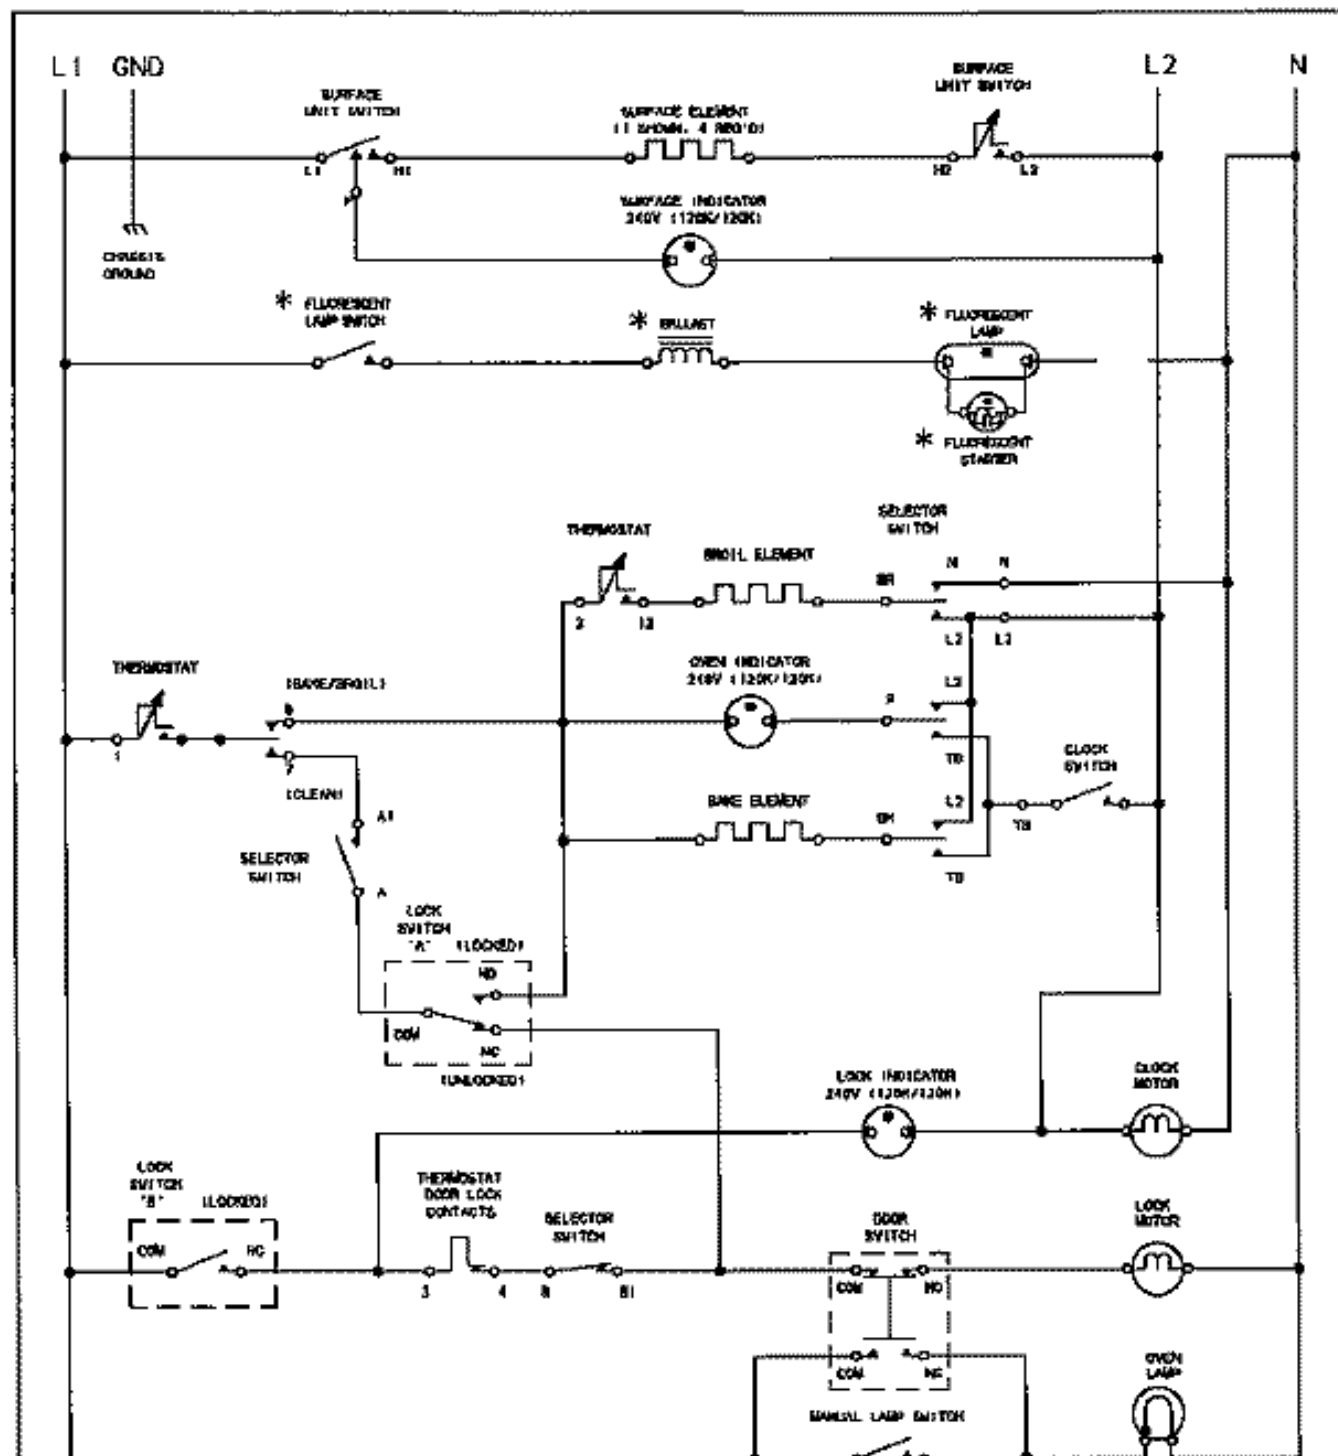

NOTES:

1. CIRCUIT SHOWN WITH ALL CONTROLS SET TO OFF. OVEN DOOR CLOSED AND UNLOCKED.
2. "B" DENOTES BACKWARD CONNECTOR PIN NUMBER.
3. COMPONENTS WITH * DO NOT APPEAR ON ALL MODELS.

SELECTOR SWITCH CONTACTS							
DIAL POSITION	BR-H	BR-L2	BR-L2	BR-TD	A-A1	B-B1	P-L2 P-TD
OFF							
WARM	X						
TIME BAKE				X			X
CLEAN				X	X		X
BOIL		X				X	X

DIAL POSITION	LOCK MOTOR SWITCH CONTACTS			
	COM-NO	COM-NO	COM-NO	COM-NO
UNLOCKED	X			N/A
LOCKING	X		X	N/A
LOCKED		X		N/A
UNLOCKING	X		X	N/A

THERMOSTAT CONTACTS				
DIAL POSITION	1-2	1-2	2-12	2-4
OFF	OFF	OFF	OFF	X
WARM/BOIL	CYCLES	OFF	CYCLES	X
CLEAN	OFF	CYCLES	N/A	X

* SPEND AT OVEN TEMPERATURE > 350°F

316002053