




FRAME AND CONSOLE PARTS

For Model: 7DP840SWSX0
(Black)

PORTABLE
DISHWASHER

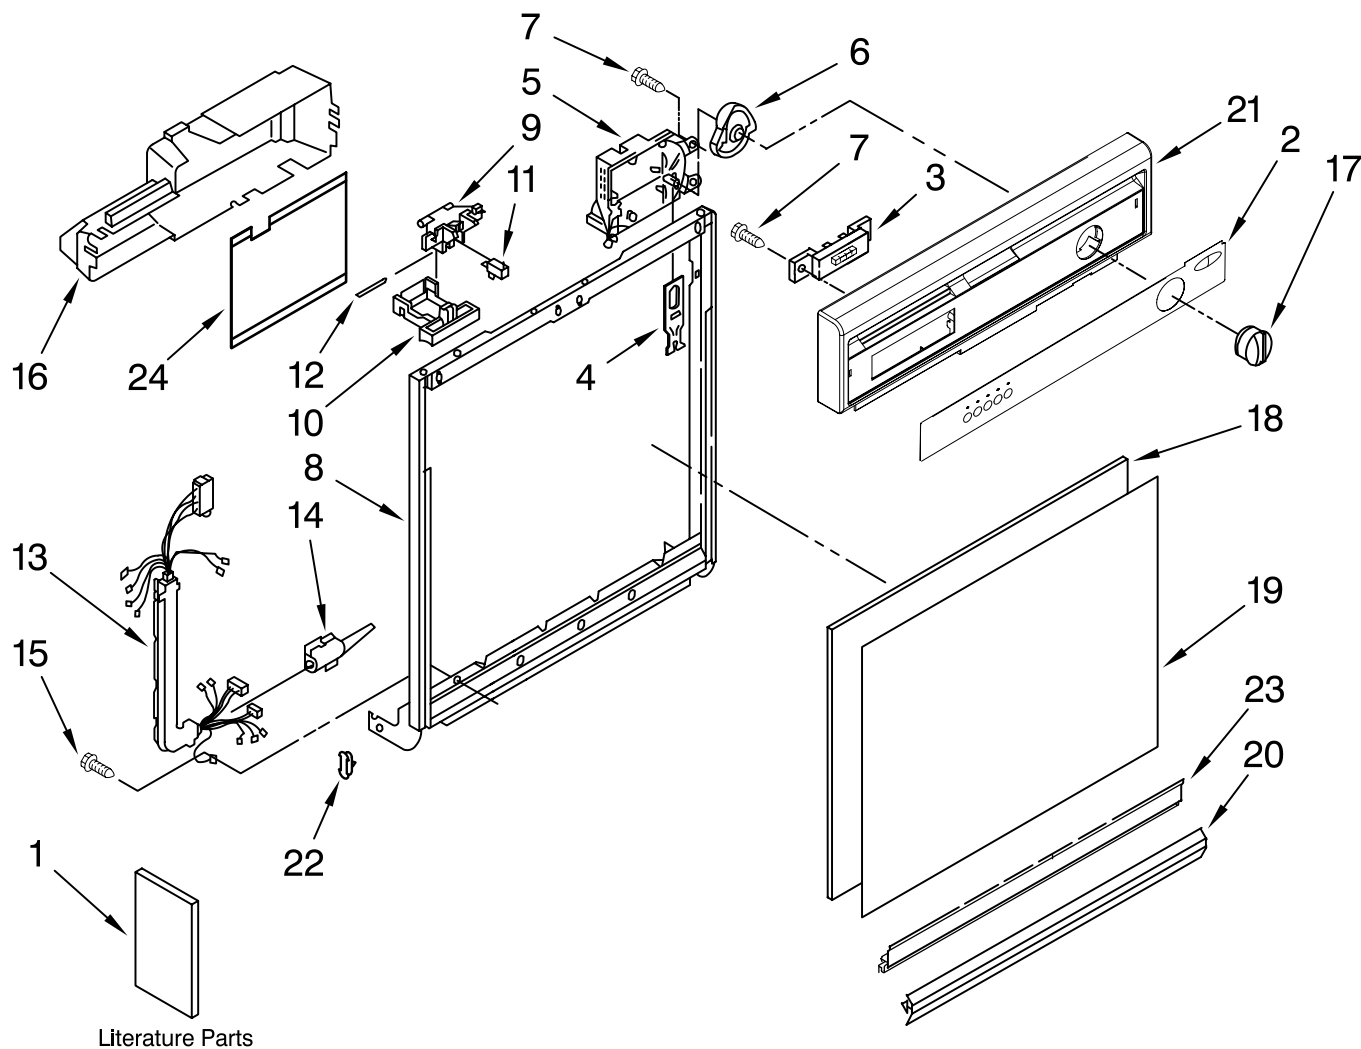

Literature Parts

Illus. No.	Part No.	DESCRIPTION
1	8572267	Literature Parts
	3385449	Guide, Use & Care
	3385449	Diagram, Wiring
2	W10102070	Insert, Console
3	8269365	Switch
4	3369529	Follower, Cam
5	8535372	Timer
6	8271510	Cam
7	304231	Screw, 8-18 x 1/2 (5)
8	3374711	Door Frame (Includes Item 23)
9	3380854	Bolt, Latch

Illus. No.	Part No.	DESCRIPTION
10	3369457	Lever, Latch
11	3369325	Switch, (2)
12	3368955	Pin, Switch (2)
13	8568324	Harness and Protector
14	3376405	Elbow, Harness
15	3400892	Screw,
16	8269526	Cover Control
17	8275308	Knob, Timer
18	3368979	Spacer
19	3369769	Front Panel White/Black
20	3374010	Retainer, Panel
21	W10072680	Console (Includes Item 2)


Illus. No.	Part No.	DESCRIPTION
22	3373234	Bearing, Spring (2)
23	3374716	Channel, Retainer (Also Order Item #20)
24	3379671	Shield, Control Cover

◆Refer To Dishwasher Replacement Panel Parts List No.675345.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INNER DOOR PARTS

For Model: 7DP840SWSX0
(Black)

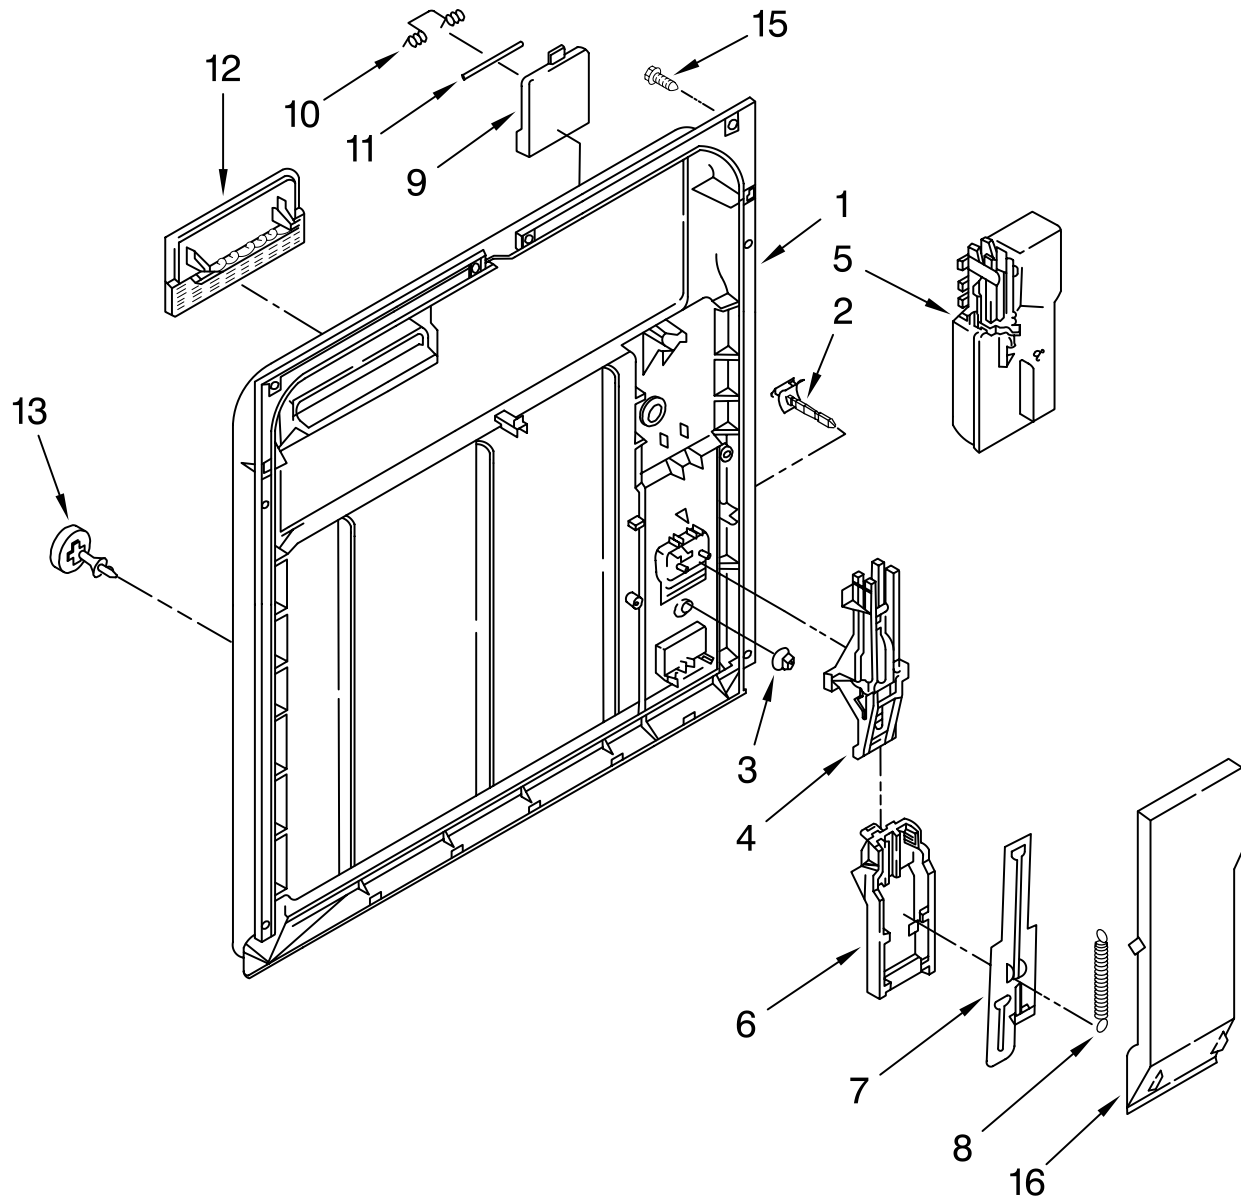


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8528310	Inner Door (Also Order Latch Door Kit 676413)	5	8052027	Wet Agent, Dispenser	9	3378138	Lid Assembly
2	3376066	Latch, Detergent Dispenser	6	3369000	Draw Bar (Upper Dispenser)	10	8066018	Spring, Lid
3	3369061	Snap, Detergent Dispenser	7	8066017	Draw Bar (Lower Dispenser)	11	3372028	Pin (Lid Hinge)
4	8519606	Actuator Assembly	8	3368999	Spring (Draw Bar)	12	3371710	Screen, Vent
						13	3378134	Cap, Wet-Agent
						15	3400815	Screw (8)
						16	3371569	Cover, Drip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: 7DP840SWSX0
(Black)

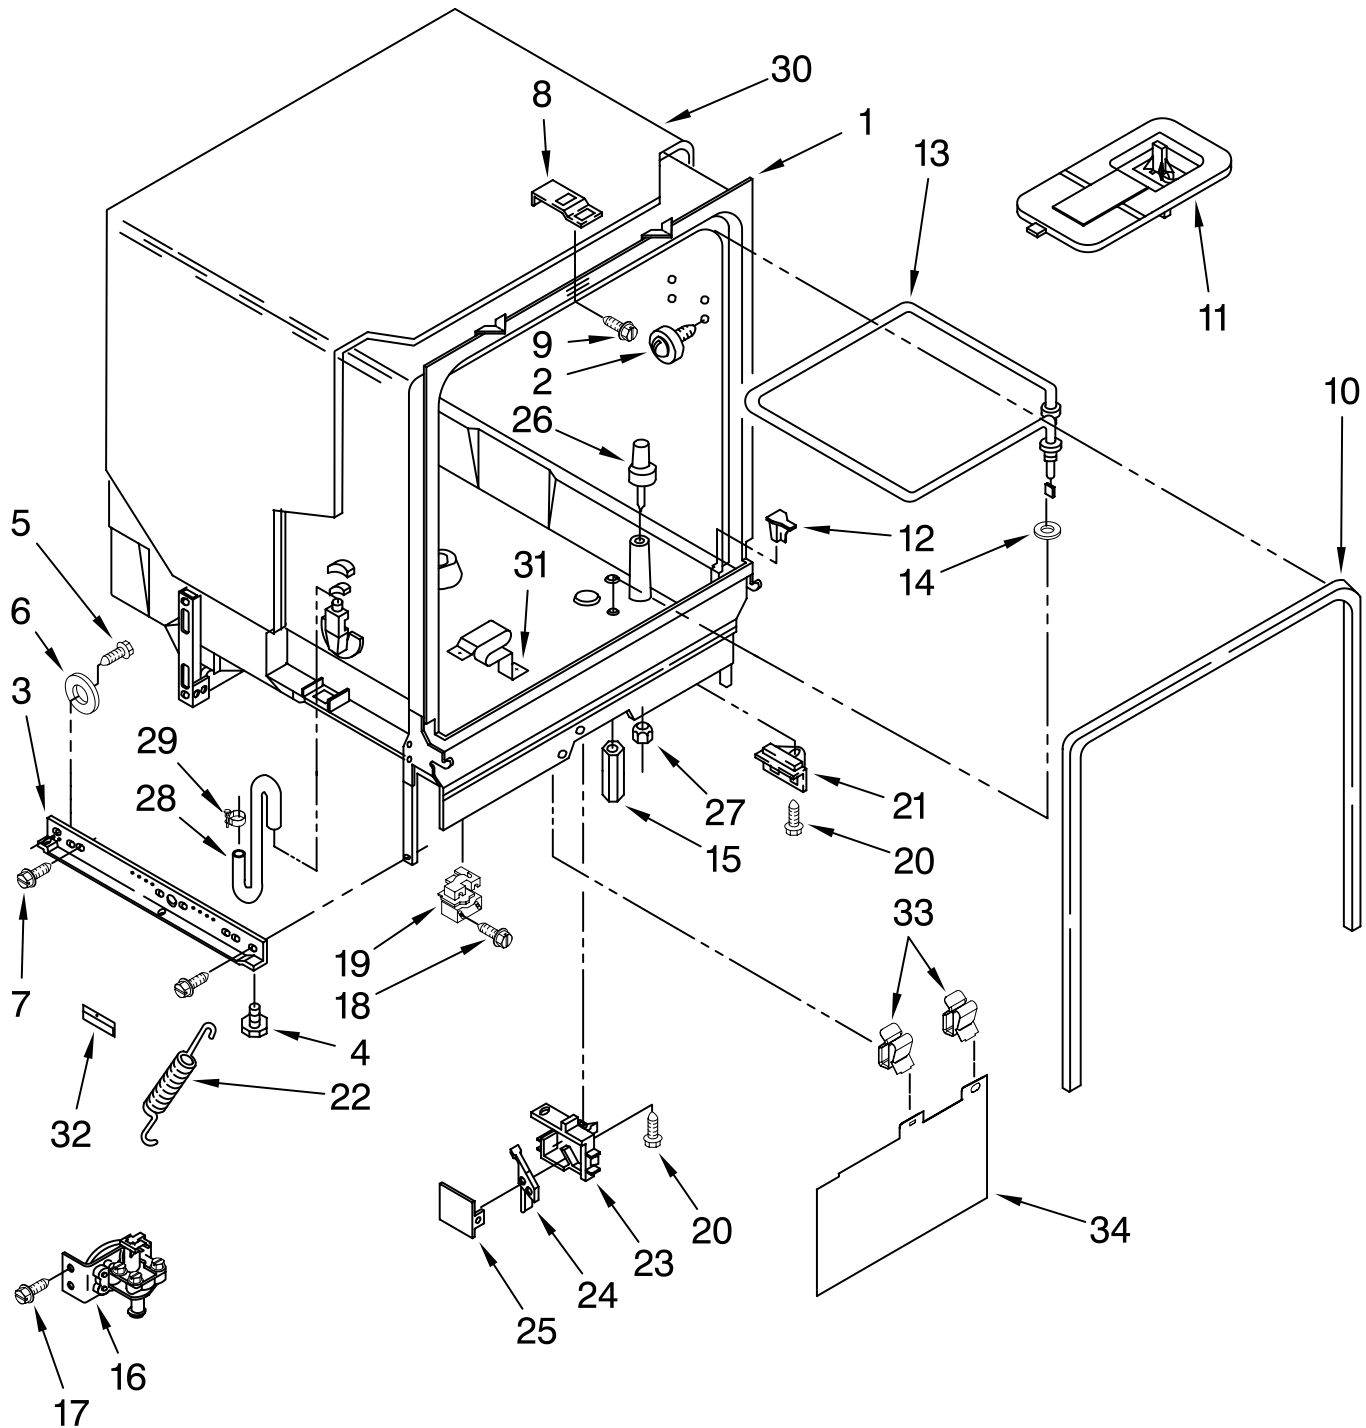

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TUB ASSEMBLY PARTS

For Model: 7DP840SWSX0
(Black)


Illus. No.	Part No.	DESCRIPTION
1	W10082657	Tub and Support Assembly
2	8528831	Tub, Wheel Assembly (8)
3	3368933	Runner (2)
4	3374849	Leveler (2)
5	3370389	Screw, Shoulder (2)
6	302819	Wheel (2)
7	343641	Screw, 10-16 x 1/2 (4)
8	3378149	Plate, Latch
9	3374720	Screw
10	W10082795	Gasket
11	3369322	Grate
12	8528862	Deflector (2)
13	8519827	Heater (Includes Item 14)
14	717273	Washer, Rubber (2)
15	8268548	Nut (2) (Heater Terminal)
16	8274220	Water Valve
17	304392	Screw
18	3370225	Screw
19	3369063	Relay
20	304231	Screw
21	3368928	Fuse, Thermal
22	3373228	Spring, Door (2)
23	8318218	Housing, Float Switch
24	3369067	Switch, Float
25	8318219	Cover, Switch Housing
26	8519552	Float
27	717488	Nut
28	3371030	Hose, Inlet
29	301958	Clamp
30	8573243	Sound Shield
31	3379740	Support, Heater
32	8052018	Friction Pad
33	3400935	Clip
34	8531865	Shield

◆Refer To Dishwasher Replacement Panel Parts List No. 675345.

CABINET PARTS

For Model: 7DP840SWKX1

White/Black

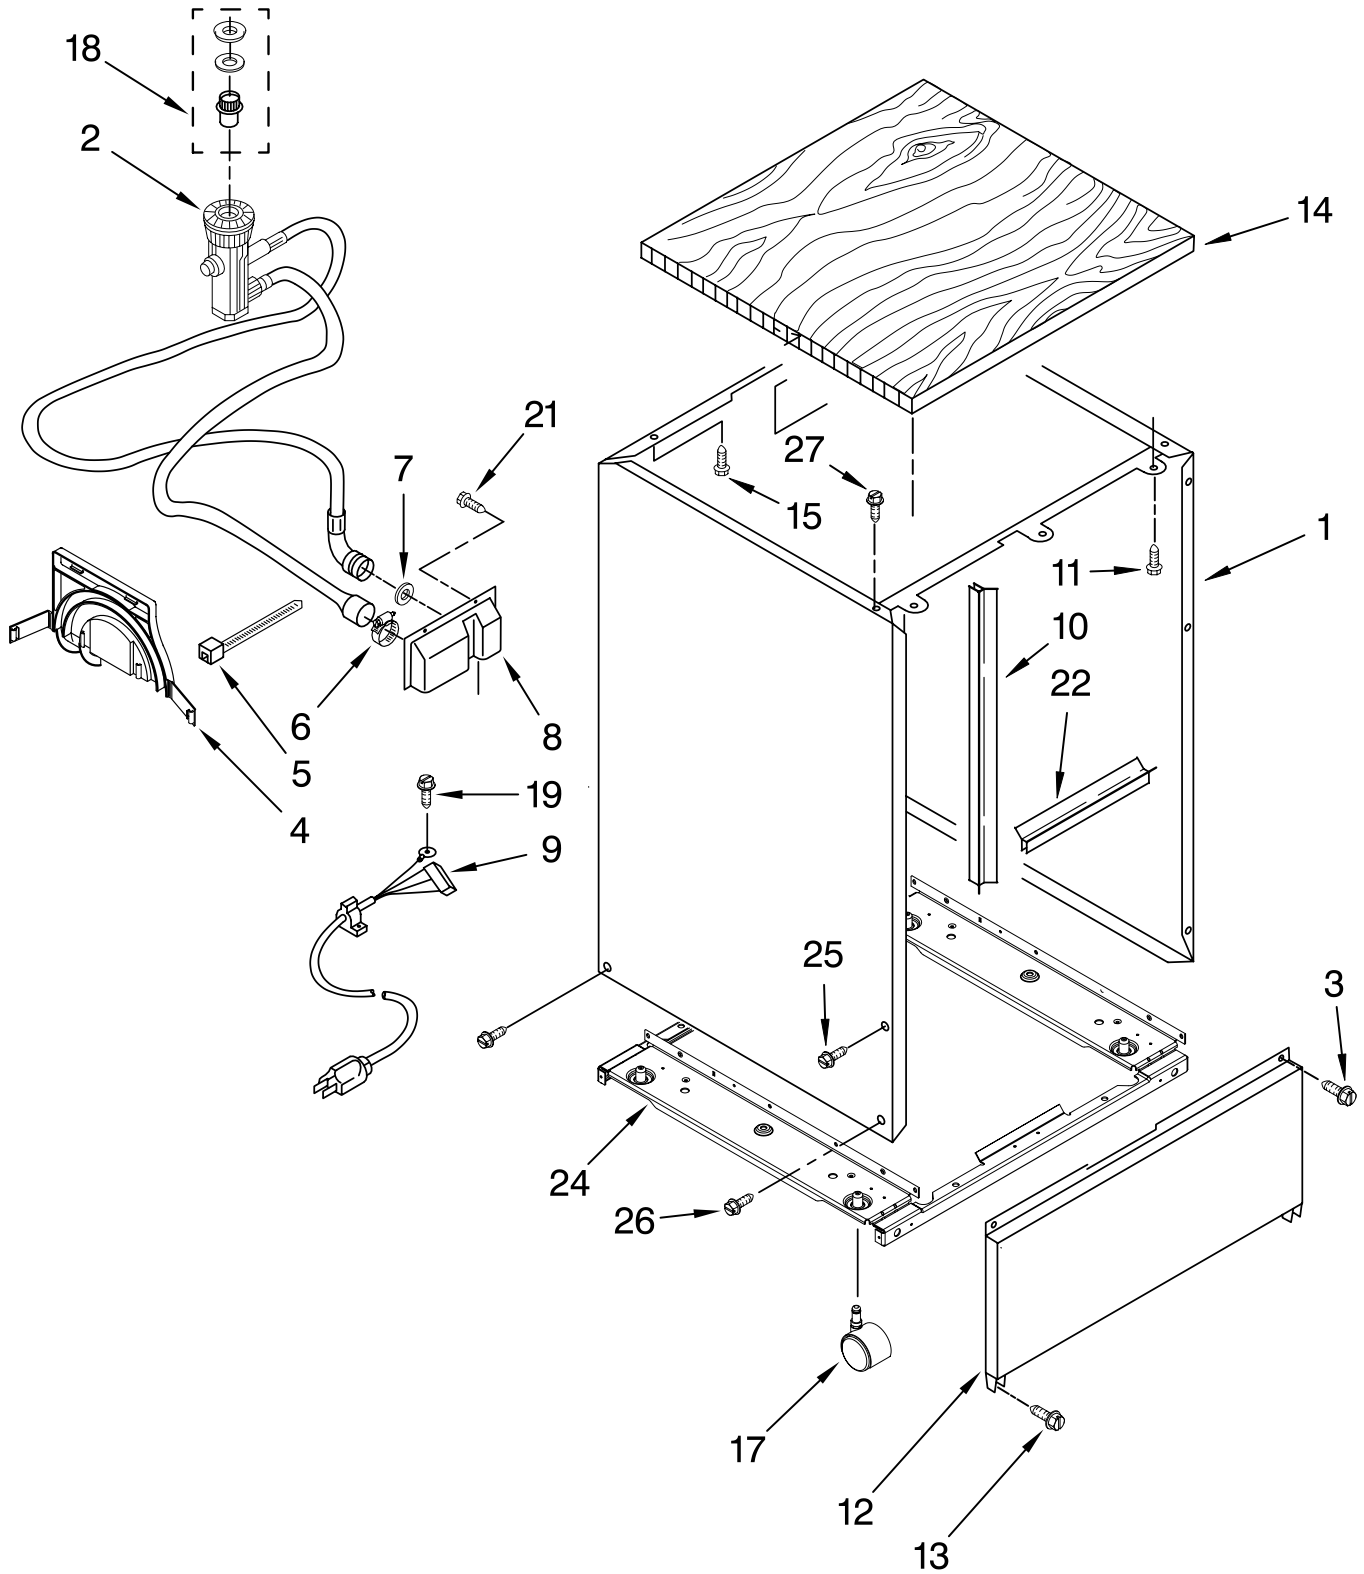

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


CABINET PARTS

For Model: 7DP840SWSX0
(Black)

Illus. No.	Part No.	DESCRIPTION
1	3378111	Shell Assembly (White)
2	8275398	Coupler Assembly
3	302868	Screw
4	3378109	Saddle, Hose
5	309330	Clip, Strap
6	3367052	Clamp, Hose
7	16123	Washer
8	3371343	Housing, Hose
9	8566201	Cord, Power
10	3378125	Protector-Edge, Divider
11	3373329	Screw
12	3371640	Shroud, Caster
13	3370544	Screw
14	3373199	Panel, Top
15	304428	Screw (2)
17	8559932	Caster
18	3374592	Adapter, Faucet
19	3372525	Screw
21	3370826	Screw (2)
22	3378126	Protector-Edge, Divider
24	8559928	Frame Assembly
25	3371635	Screw
26	3371644	Screw
27	302251	Screw

DISHRACK PARTS

For Model: 7DP840SWSX0
(Black)

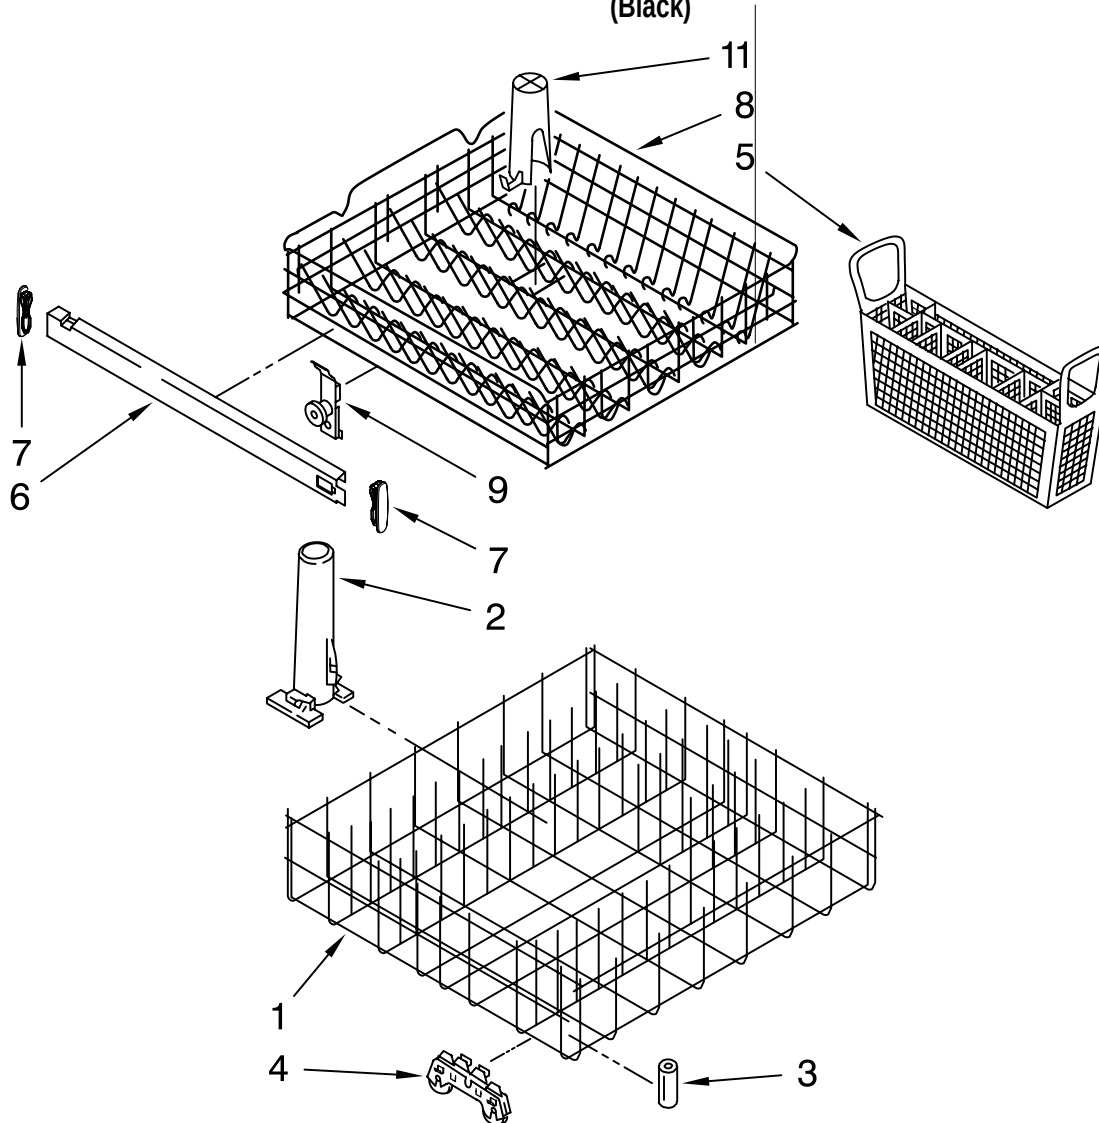


Illus. No.	Part No.	DESCRIPTION
1	8539225	Lower Dishrack Assembly
2	8268825	Tower, Protector
3	3385142	Bumper, Dishrack (2)
4	8268645	Wheel & Transport Assembly (4)
5	8268866	Basket, Silverware
6	3385089	Track, Dishrack (2)
7	8565920	Stop, Track (4)
8	8539222	Dishrack, Upper
9	8268852	Wheel & Axle Assembly (4)
11	8519550	Diffuser, Water

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND SPRAY ARM PARTS

For Model: 7DP840SWSX0
(Black)

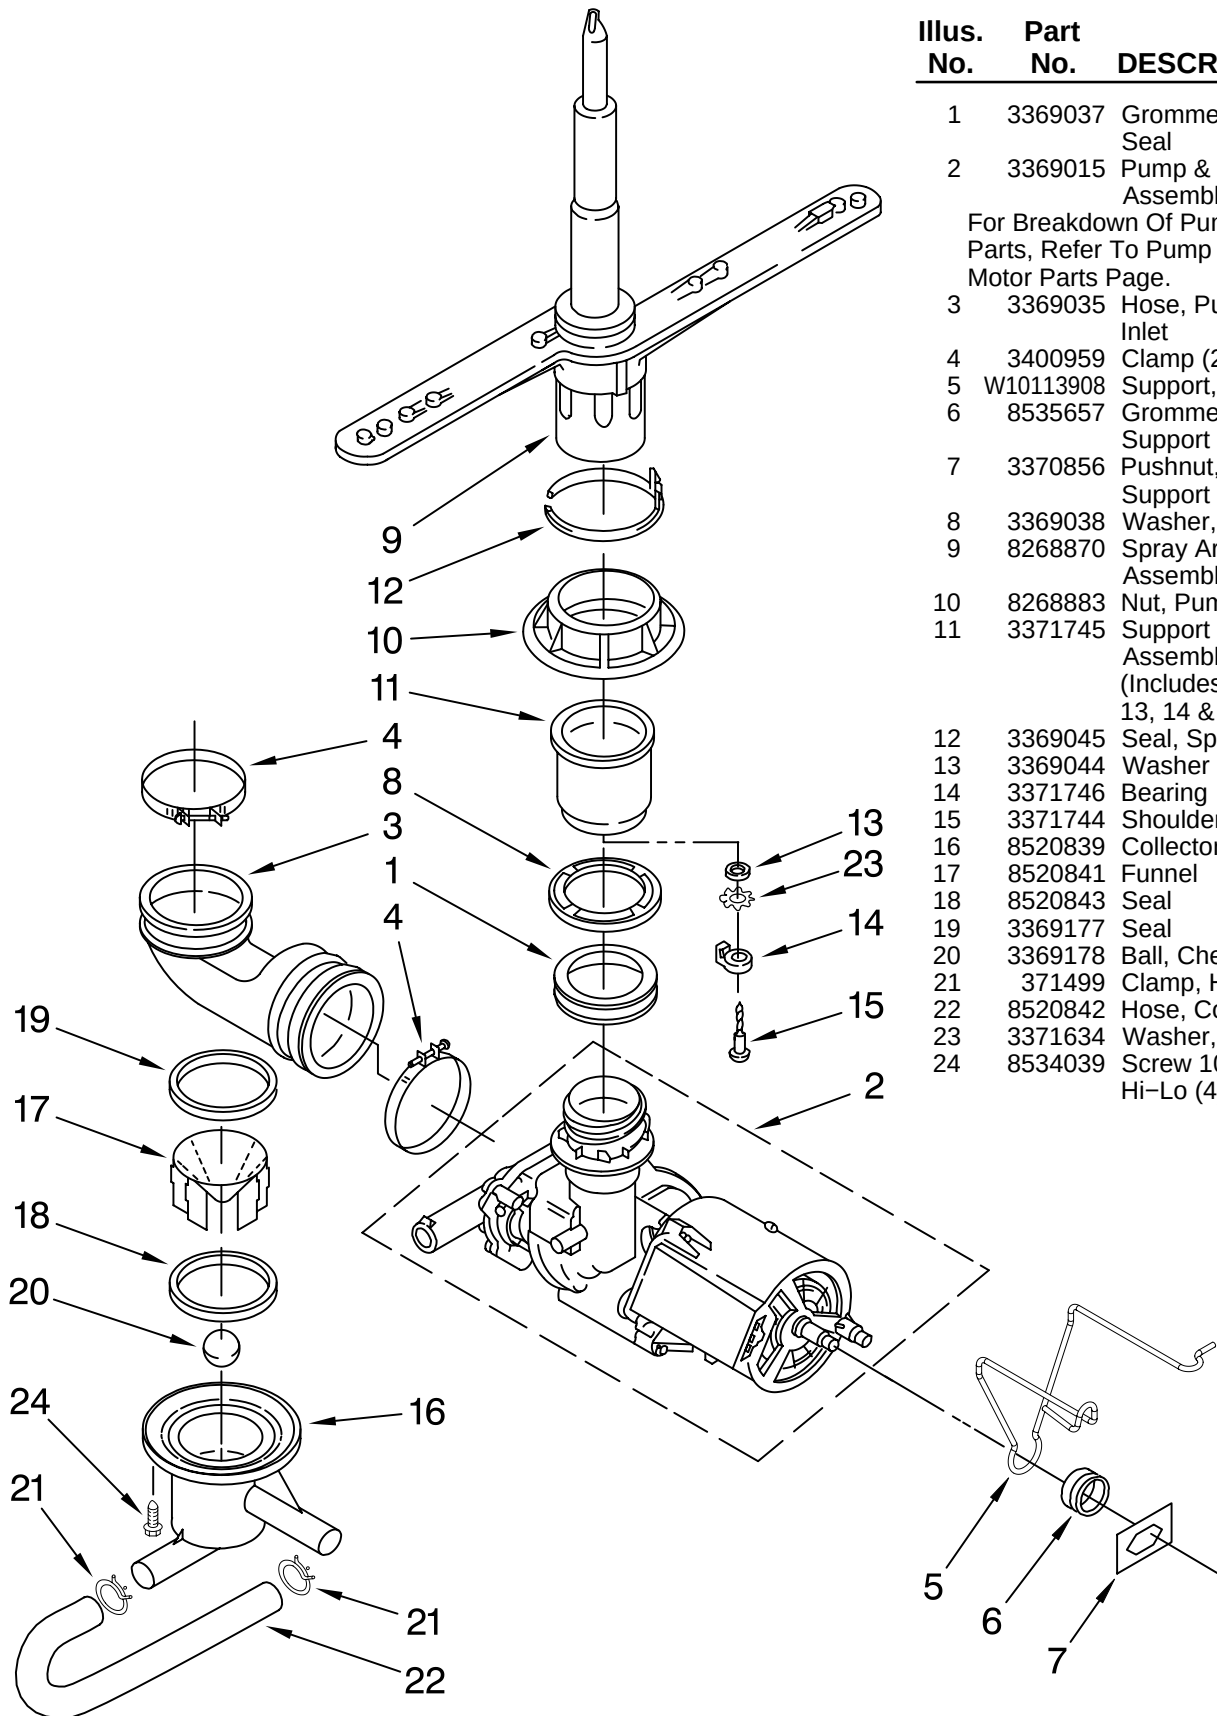


Illus. No.	Part No.	DESCRIPTION
1	3369037	Grommet, Pump Seal
2	3369015	Pump & Motor Assembly
For Breakdown Of Pump Parts, Refer To Pump And Motor Parts Page.		
3	3369035	Hose, Pump Inlet
4	3400959	Clamp (2)
5	W10113908	Support, Motor
6	8535657	Grommet, Motor Support
7	3370856	Pushnut, Motor Support
8	3369038	Washer, Grommet
9	8268870	Spray Arm, Assembly Lower
10	8268883	Nut, Pump Outlet
11	3371745	Support & Bearing Assembly (Includes Items: 13, 14 & 15)
12	3369045	Seal, Split Ring
13	3369044	Washer
14	3371746	Bearing
15	3371744	Shoulder Screw
16	8520839	Collector
17	8520841	Funnel
18	8520843	Seal
19	3369177	Seal
20	3369178	Ball, Check-Valve
21	371499	Clamp, Hose
22	8520842	Hose, Collector
23	3371634	Washer, Curved
24	8534039	Screw 10-16, Hi-Lo (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PUMP AND MOTOR PARTS

For Model: 7DP840SWSX0
(Black)

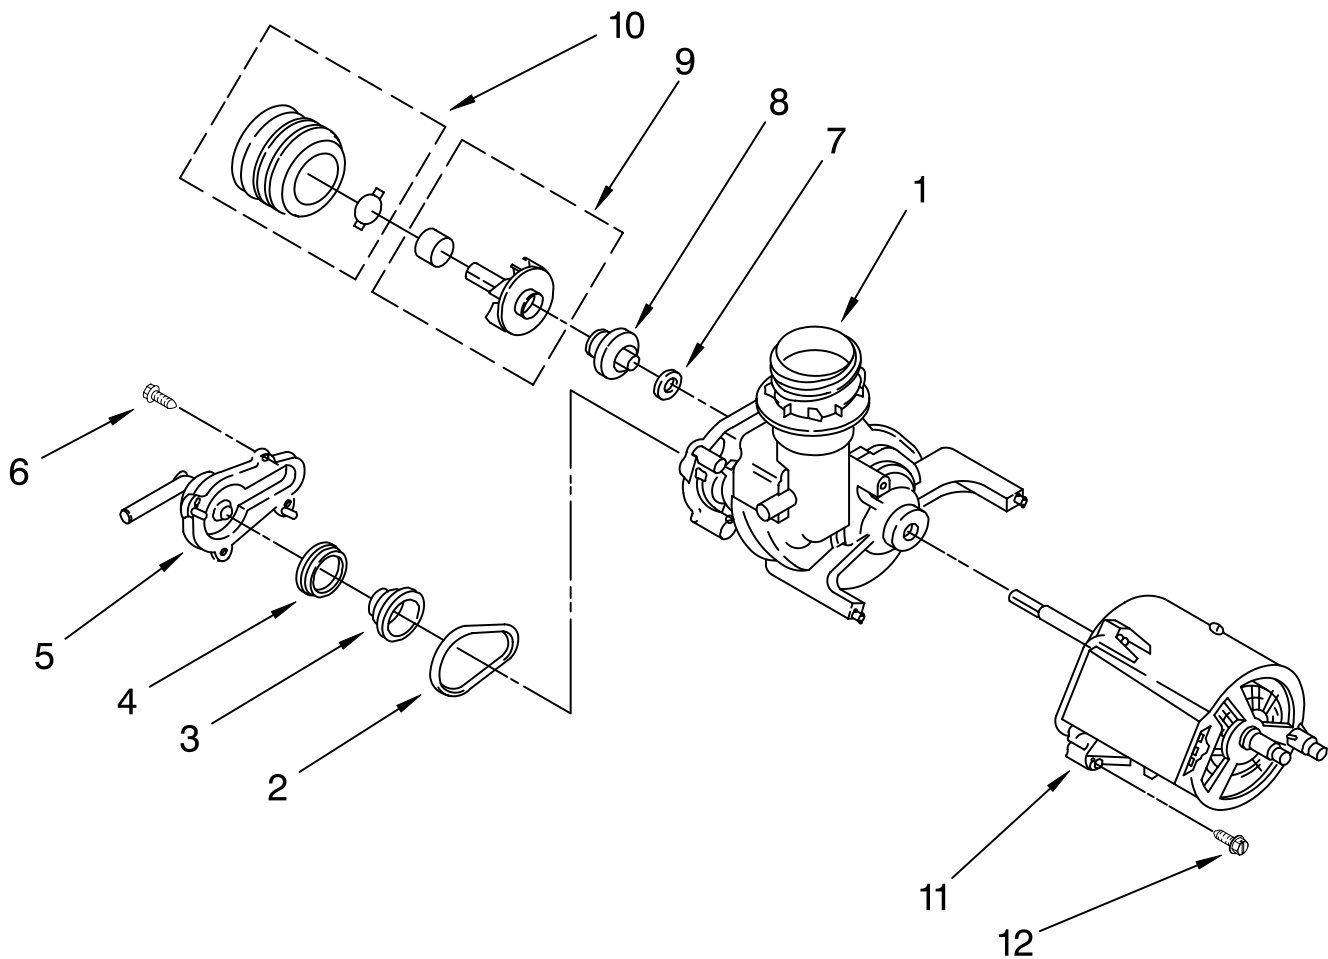

Illus. No.	Part No.	DESCRIPTION
1	3369011	Housing Assembly
2	3369031	Seal, Drain Cover
3	8563504	Diaphragm
4	3369029	Ring, Diaphragm
5	3369030	Cover, Drain Valve
6	3368921	Screw (4)
7	3369020	Seal Seat
8	3385557	Seal Head
9	3369013	Impeller & Bearing Assembly
10	3369012	Disk & Mount Assembly
11	8283457	Motor
12	3368922	Screw (3)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Model: 7DP840SWSX0
(Black)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
72032 Black

PAINT, PRESSURIZED SPRAY (12 oz.)

285006 Superior Black
350942 Primer (White)

PAINT, TOUCH-UP (1 qt.)

799340 Black (Uncut)

DISHRACK REPAIR

675576 Vinyl Touch-Up
(Blue)
676453 Vinyl Touch-Up
(White)
676455 Vinyl Touch-Up
(Grey)

ACCESSORY PARTS

Side Panel Kits:

4317925 White
4317929 Almond

Door Spring Kit:

4318050 Heavy Duty