




Door Parts

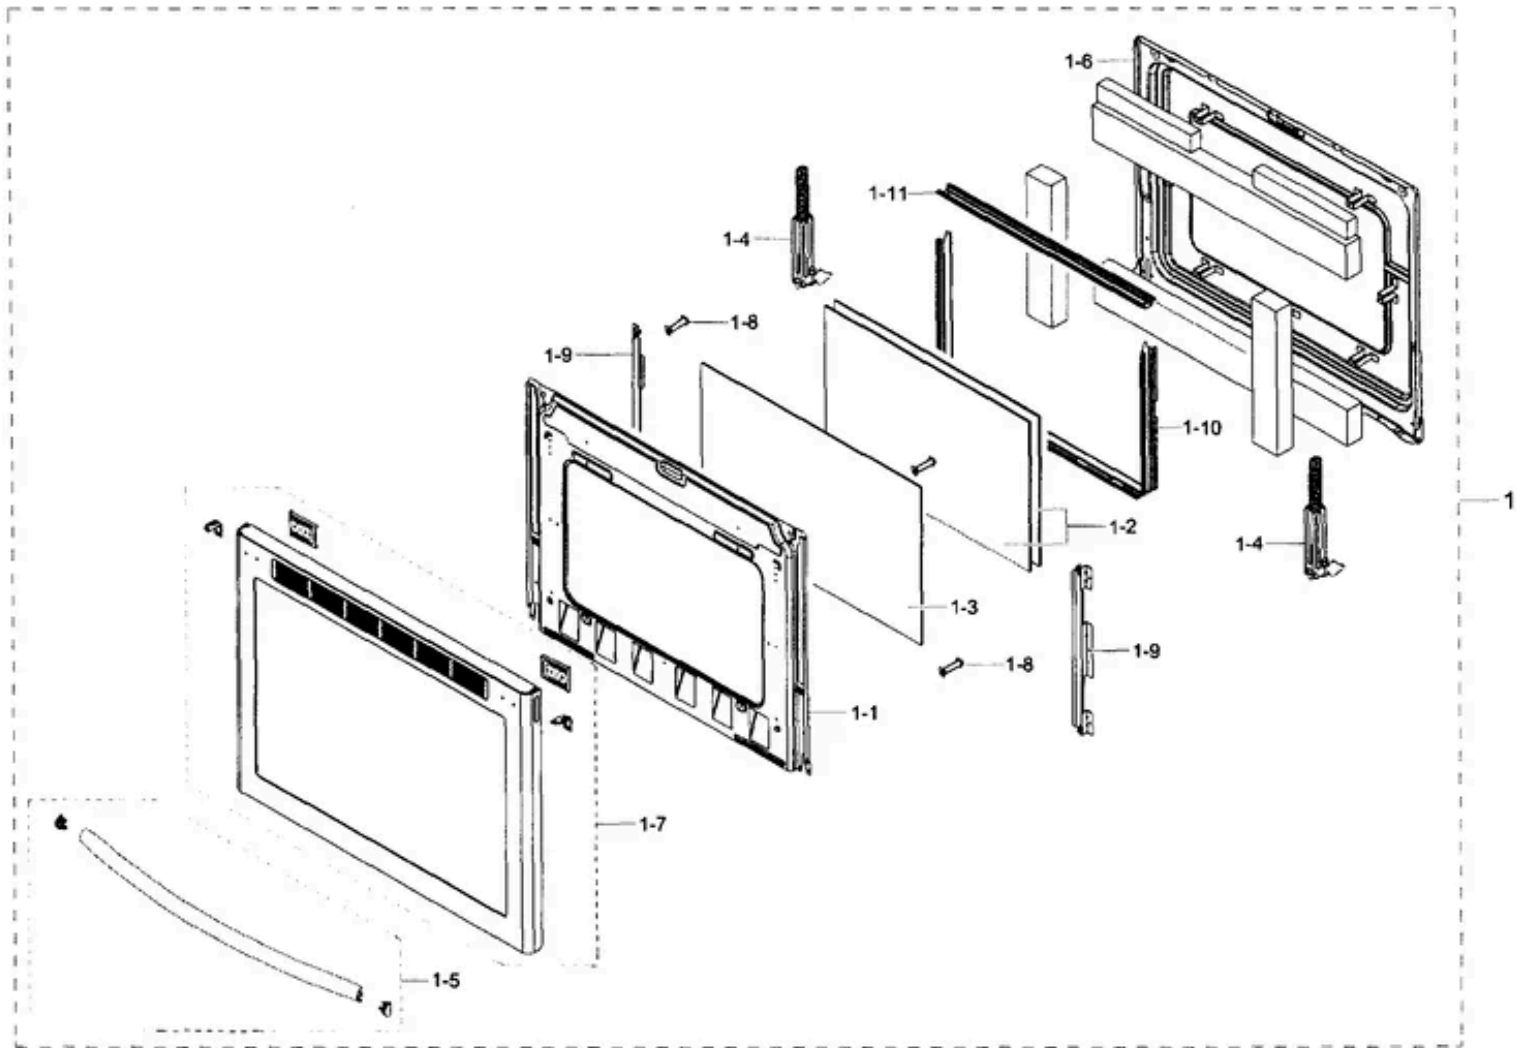


Drawer Parts

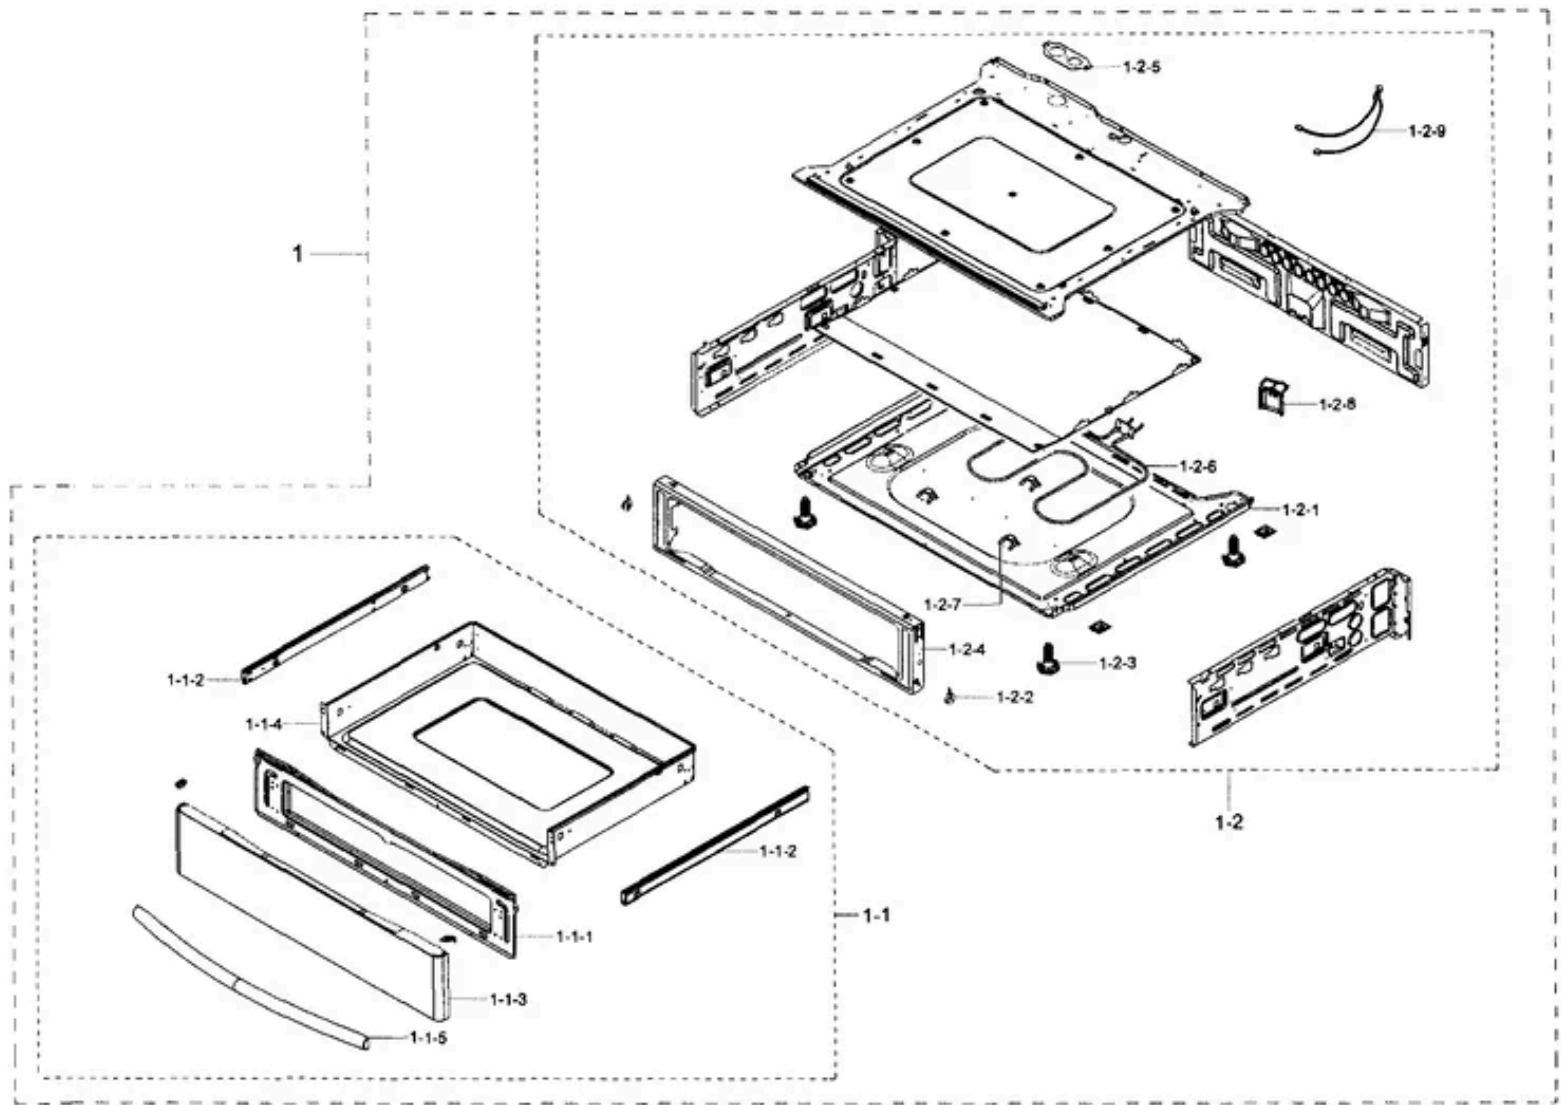

Control Panel Parts

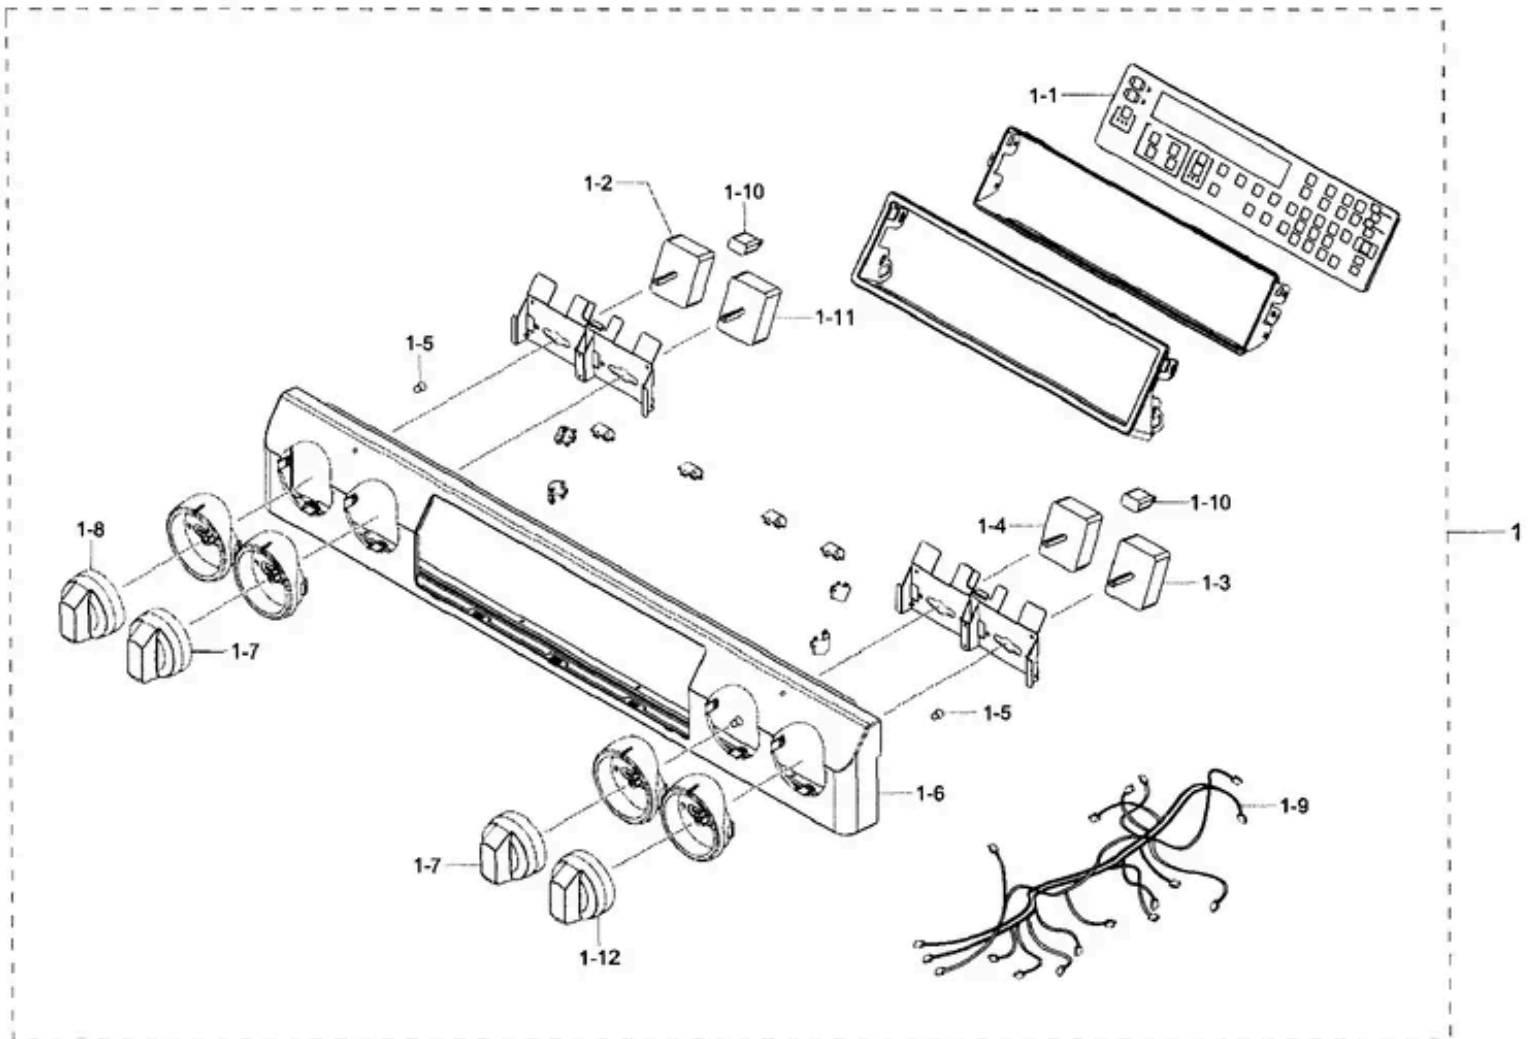

Cooktop Parts

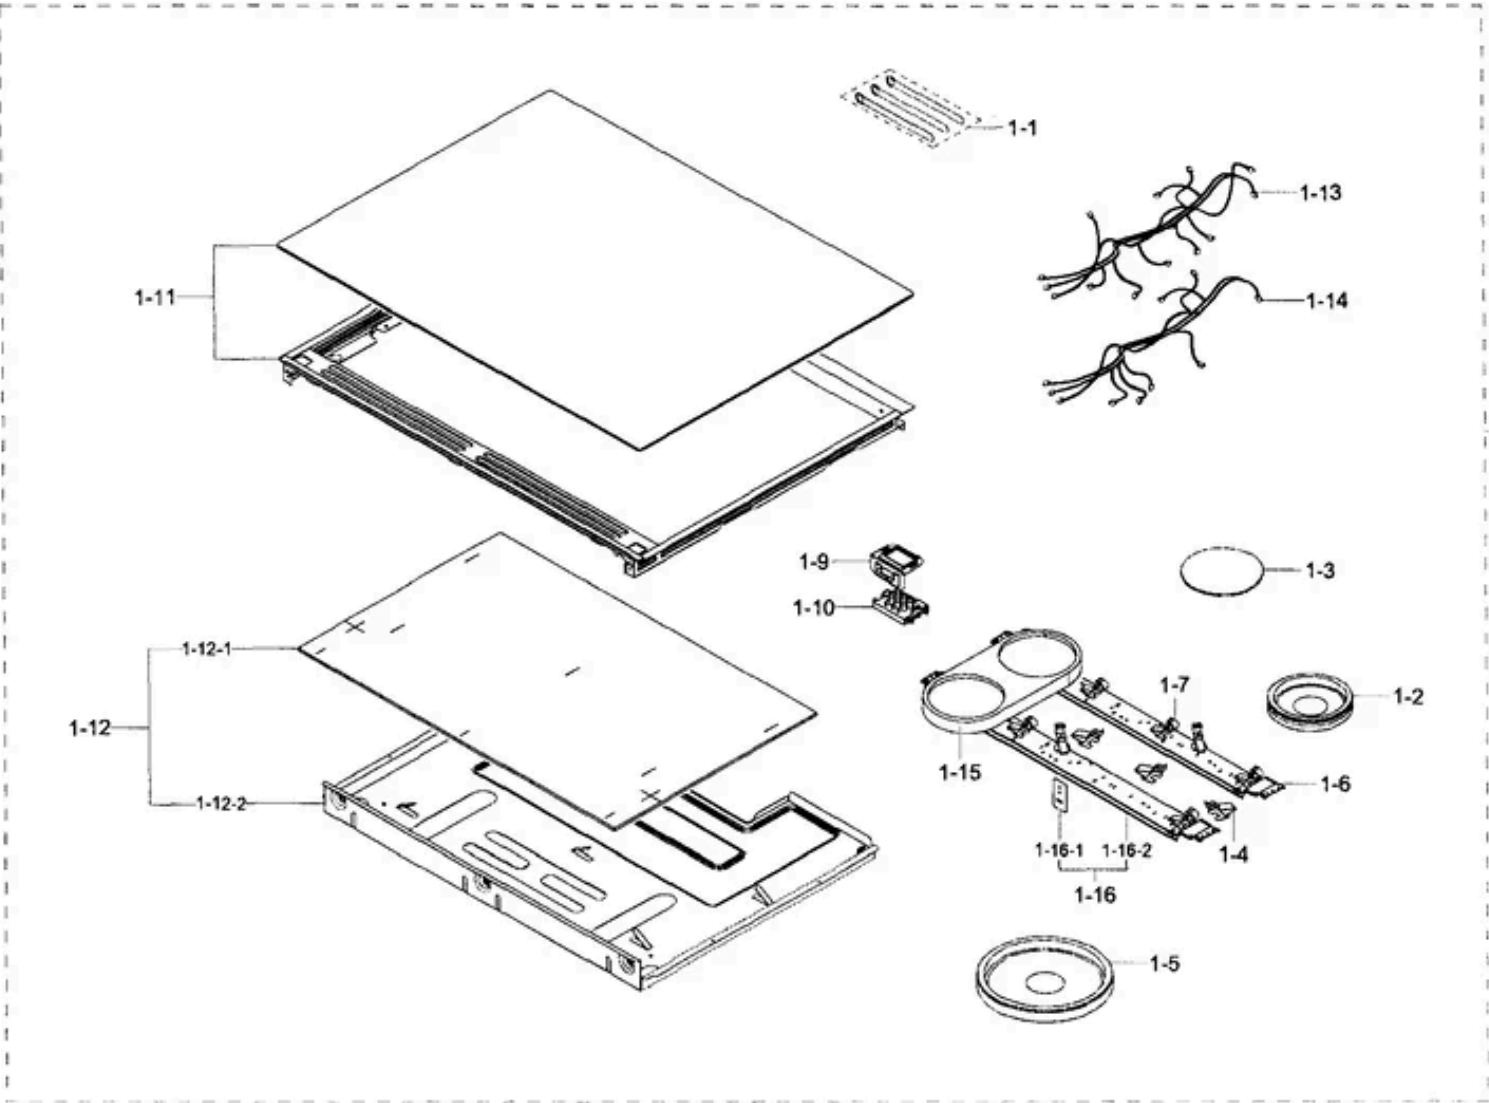

This exploded view diagram illustrates the assembly of a portable electronic device, likely a handheld radio or scanner. The components are numbered 1 through 50. The central assembly shows the main housing (27) with internal components like the battery pack (29) and circuit board (37). The front face includes a speaker grille (49), a display or keypad area (48), and a carrying handle (44). The back features a carrying strap (32) and a mounting bracket (46). Various screws (e.g., 13, 16, 20, 21) and small components (e.g., 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 14, 15, 17, 18, 19, 22, 23, 24, 25, 26, 30, 31, 33, 34, 35, 36, 38, 40, 41, 42, 43, 45) are shown in their respective positions for assembly. Dashed boxes highlight specific sub-assemblies or groups of parts, such as the antenna assembly (7, 8, 10) and the mounting bracket assembly (46, 47, 48).